

NASA CR-

141776


TEST PROCEDURE FOR HASSELBLAD FIELD IRRADIANCE

(NASA-CR-141776) TEST PROCEDURE FOR
HASSELBLAD FIELD IRRADIANCE (Lockheed
Electronics Co.) 20 p HC \$3.25 CSCL 14E

N75-22685

Unclas
63/35 19471

Prepared By
Lockheed Electronics Company, Inc.
Aerospace Systems Division
Houston, Texas
Contract NAS-9-12200

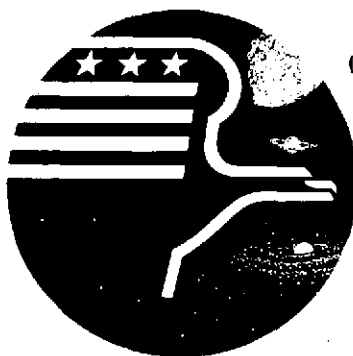

For
CAMERA AND OPTICAL ENGINEERING DEPARTMENT

National Aeronautics and Space Administration
LYNDON B. JOHNSON SPACE CENTER
Houston, Texas

April 1975

LEC-5968

TECHNICAL REPORT INDEX/ABSTRACT
(See instructions on reverse side.)

1. TITLE AND SUBTITLE OF DOCUMENT		2. JSC NO.
TEST PROCEDURE FOR HASSELBLAD FIELD IRRADIANCE		JSC-09629
3. CONTRACTOR/ORGANIZATION NAME	4. CONTRACT OR GRANT NO.	
LOCKHEED ELECTRONICS COMPANY	NAS-9-12200	
5. CONTRACTOR/ORIGINATOR DOCUMENT NO.	6. PUBLICATION DATE (THIS ISSUE)	
LEC-5968	APRIL 1975	
7. SECURITY CLASSIFICATION	8. OPR (OFFICE OF PRIMARY RESPONSIBILITY)	
UNCLASSIFIED	FRED PEARCE	
9. LIMITATIONS GOVERNMENT HAS UNLIMITED RIGHTS <input checked="" type="checkbox"/> YES <input type="checkbox"/> NO	10. AUTHOR(S) CONNIE GEORGE	
11. STATE LIMITATIONS AND AUTHORITY		
11. DOCUMENT CONTRACT REFERENCES	12. HARDWARE CONFIGURATION	
WORK BREAKDOWN STRUCTURE NO. NA	SYSTEM NA	
CONTRACT EXHIBIT NO. NA	SUBSYSTEM NA	
DRL NO. AND REVISION NA	MAJOR EQUIPMENT GROUP NA	
DRL LINE ITEM NO. NA		
13. ABSTRACT		
THIS DOCUMENT DEFINES THE PROCEDURE FOR DETERMINING THE UNIFORMITY OF FILM PLANE ILLUMINATION (FIELD IRRADIANCE) OF HASSELBLAD CAMERAS.		
14. SUBJECT TERMS		
ASTP		
ERAP		

PROJECT DOCUMENT COVER SHEET

TEST PROCEDURE
FOR
HASSELBLAD
FIELD IRRADIANCE

REPORT NUMBER
ED82-AC-662

DATE

PREPARED BY:	<i>C. George</i> C. George	Approved:	<i>P. M. Griffiths</i> P. M. Griffiths
APPROVED:	(BRANCH AND/OR SUPPORT OFFICE) ED/8 F. Pearce <i>F. Pearce</i>		
APPROVED:	(DIVISION) ED/8 H. Kuehnelt <i>H. Kuehnelt</i>		
APPROVED:	(PROGRAM OFFICE) ND/5 D. Dittmar <i>Dittmar</i>	4/15/75	

NO. OF PAGES

		REVISIONS			CHG. LETTER
DATE	PREPARED BY	APPROVALS			
		BRANCH	DIVISION	PROGRAM OFFICE	

REPORT NUMBER

TABLE OF CONTENTS

<u>PARAGRAPH</u>	<u>TITLE</u>	<u>PAGE</u>
1.0	PURPOSE.....	1
2.0	APPLICATION.....	1
3.0	TEST EQUIPMENT.....	1
4.0	TEST PROCEDURE.....	1
4.1	Equipment Setup.....	1
4.2	Calibration Procedure.....	1

LIST OF FIGURES

<u>NO.</u>	<u>TITLE</u>	<u>PAGE</u>
3-1	FIELD IRRADIANCE TEST SETUP.....	2

LIST OF TABLES

<u>NO.</u>	<u>TITLE</u>	<u>PAGE</u>
4-1	DATA SHEET FOR FIELD IRRADIANCE	
	PART I - CHECKOUT.....	5
	PART II - EQUIPMENT ID/DATA RECORDING...	11

1.0 PURPOSE

The purpose of this document is to define the procedure for determining the uniformity of film plane illumination (field irradiance) of the Hasselblad cameras.

The data source shall consist of photographs, with X-Y scans being taken for indication only. The accuracy requirement is 2.0%.

2.0 APPLICATION

This document is applicable to all Hasselblad lens field irradiance tests unless otherwise specified. All data and comments are to be recorded on the Data Sheet, Part II (see Table 4-1). All testing shall be verified by Government inspection.

3.0 TEST EQUIPMENT

The following equipment is utilized in the determination of field irradiance. (See Figure 3-1 for an illustration of the test setup.)

- Photometer, Gamma Model 2020, S/N 793
- Photomultiplier, Gamma Model 2020-1, S/N 784
- Automatic Photometer Scan, NASA No. 86684
- Hasselblad Mounting Fixture
- Beck Hemisphere, S/N 002
- IL700 Research Radiometer, S/N 84
- Variac
- IL700 Detector, PT171C, S/N 86
- Power Source, NASA No. 36129 (DC Power Supply)
- Shutter Release Box
- Fiber Optic Probe with Cosine Adapter (.016" Salisbury cap attached)

4.0 TEST PROCEDURE

4.1 Equipment Setup

4.1.1 Record test equipment and test article part number (P/N) and/or serial number (S/N) on the Data Sheet, Part II.

4.1.2 Verify that test equipment is operational.

4.2 Calibration Procedure

4.2.1 Mount the camera and lens on the Hasselblad mounting fixture.

REPORT FD82-AC-662

NASA-JSC
HOUSTON, TEXAS

PAGE 2 OF 14
DATE April 1 1975

TO BE PROVIDED

FIGURE 3-1 FIELD IRRADIANCE TEST SETUP

- 4.2.2 Verify that the mounting fixture is in correct orientation (i.e., the bottom thumbscrews shall be all the way up so that the camera is vertical).
- 4.2.3 Set Variac to required voltage. Verify with the IL700 photometer. Record data on the Data Sheet.
- 4.2.4 Open the camera shutter.
- 4.2.5 Put the X-Y scanner into manual control and check the X-Y scan plane manually.

NOTE: THE MAIN DATA SOURCE CONSISTS OF
PHOTOGRAPHS. THE X-Y SCAN IS FOR
INDICATION ONLY.

- 4.2.6 With the X-Y scanner in manual control, define the following:

- X-start position
- Increment size of X
- Number of increments in X
- Y-start position
- Increment size of Y
- Number of increments in Y

Record information on Data Sheet, Part I.

- 4.2.7 Check for photometer and set it to a range of 100 ± 5 by varying the HV adjust.
- 4.2.8 Set f/number to the largest aperture. Record on Data Sheet, Part I.
- 4.2.9 Run X-Y scan as per the parameters derived in Paragraph 4.2.6.
- 4.2.10 Repeat Step 4.2.6 for the center vertical scan of film plane.
- 4.2.11 Remove fiber probe assembly and install magazine containing type 3400 film.
- 4.2.12 Turn off scanner and close camera shutter.
- 4.2.13 Set the camera to the largest f/number (smallest numerical setting). Record on Data Sheet, Part I.
- 4.2.14 Set exposure time to matrix value for largest f/number (smallest numerical setting). Record on Data Sheet, Part I.

- 4.2.15 Open the camera shutter.
- 4.2.16 Take three data frames and blank two.
- 4.2.17 Set the lens to the next f/number until all f/numbers below f/16 have been completed. Record on Data Sheet, Part I. When all f/numbers below f/16 have been completed, go to Paragraph 4.2.19.
- 4.2.18 Repeat Paragraphs 4.2.14 through 4.2.17.
- 4.2.19 Place the second lens on the camera and repeat Paragraphs 4.2.13 and all following steps. With the second lens on the camera, repeat Paragraphs 4.2.2 through 4.2.10.
- 4.2.20 Turn off all test equipment.
- 4.2.21 Remove Hasselblad camera from calibration setup.

TABLE 4-1
DATA SHEET FOR
FIELD IRRADIANCE
PART I - CHECKOUT

PARA REF	DESCRIPTION	INSPECTION
4.1.1	P/N's and/or S/N's of the test equipment recorded on Part II of the Data Sheet	
4.1.2	Equipment is operational.	
4.2.1	Camera and lens are mounted on the Hasselblad mounting fixture.	
4.2.2	The Hasselblad mounting fixture is in correct orientation (i.e., the camera is vertical).	
4.2.3	The Variac is set to the following voltage and verified with the IL700 photometer •	
4.2.4	The camera shutter is open.	
4.2.5	The X-Y scanner is in manual control.	
	The X-Y scan plane is checked manually.	
4.2.6	The X-Y scanner is in manual control.	
	The following are defined: <ul style="list-style-type: none"> • X-start position: • Increment size of X: • Number of increments in X: • Y-start position: • Increment size of Y: • Number of increments in Y: 	
4.2.7	The photometer is checked and set to a range of 100 \pm 5 by varying the HV adjust.	

TABLE 4-1 (CONT'D)

PART I - CHECKOUT

PARA REF	DESCRIPTION	INSPECTION
4.2.8	The f/number is set to the largest aperture as follows: •	
4.2.9	The X-Y scan is run using the parameters defined in Paragraph 4.2.6 of the Data Sheet, Part I.	
4.2.10	Repeat Step 4.2.6 for the center vertical scan of film plane.	
4.2.11	The fiber probe assembly is removed.	
	Magazine containing type 3400 film is installed.	
4.2.12	Scanner is turned off.	
	Camera shutter is closed.	
4.2.13	The f/number is set to the largest f/number (smallest numerical setting) as follows: •	
4.2.14	Exposure time is set to matrix value for largest f/number (smallest numerical setting) as follows: •	
4.2.15	The camera shutter is open.	
4.2.16	Three data frames are taken.	
	Two data frames are blanked.	

REPORT ED82-AC-662

HOUSTON, TEXAS

DATE April 1975

TABLE 4-1 -(CONT'D)

PART I - CHECKOUT

PARA REF	DESCRIPTION	INSPECTION
4.2.17	<p>The lens is set to the next f/number until all f/numbers below f/16 are completed. The f/numbers used are as follows:</p> <ul style="list-style-type: none"> • • • • <p>Upon completing all f/numbers below f/16, the steps in Paragraph 4.2.19 are performed.</p>	
4.2.18	<p>Steps in Paragraph 4.2.14 through 4.2.17 are performed as follows:</p> <p>A. <u>Paragraph 4.2.14.</u> Exposure time is set to matrix value for largest (smallest numerical setting) f/number as follows:</p> <ul style="list-style-type: none"> • <p>B. <u>Paragraph 4.2.15.</u> The camera shutter is open.</p> <p>C. <u>Paragraph 4.2.16.</u> Three data frames are taken. Two data frames are blanked.</p> <p>D. <u>Paragraph 4.2.17.</u> The lens is set to the next f/number until all f/numbers below f/16 are completed. The f/numbers used are as follows:</p> <ul style="list-style-type: none"> • • • • 	

TABLE 4-1 - (CONT'D)

PART I CHECKOUT

PARA REF	DESCRIPTION	INSPECTION
4.2.19	The second lens is placed on the camera and steps described in Paragraphs 4.2.13 through 4.2.17 are performed.	
	A. Paragraph 4.2.13. The f/number is set to the largest f/number (smallest numerical setting) as follows: •	
	B. Paragraph 4.2.14. Exposure time is set to matrix value for largest f/number (smallest numerical setting) as follows: •	
	C. Paragraph 4.2.15. The camera shutter is open.	
	D. Paragraph 4.2.16. Three data frames are taken. Two data frames are blanked.	
	E. Paragraph 4.2.17. The lens is set to the next f/number until all f/numbers below f/16 have been used. The f/numbers used are as follows: • • • • If the second lens is already on the camera, the steps described in Paragraphs 4.2.2 through 4.2.10 are performed as follows:	

REPORT ED82-AC-662

HOUSTON, TEXAS

DATE April 1975

TABLE 4-1 (CONT'D)

PART I - CHECKOUT

PARA REF	DESCRIPTION	INSPECTION
4.2.19 (Cont'd)	1. Paragraph 4.2.2. The Hasselblad mounting fixture is in correct orientation (i.e., the camera is vertical).	
	2. Paragraph 4.2.3. The Variac is set to the following voltage and verified with the IL700 photometer.	
	3. Paragraph 4.2.4. The camera shutter is open	
	4. Paragraph 4.2.5. The X-Y scanner is in manual control. The X-Y scanner is checked manually.	
	5. Paragraph 4.2.6. The X-Y scanner is in manual control. The following are defined: <ul style="list-style-type: none"> • X-start position: • Increment size of X: • Number of increments in X: • Y-start position: • Increment size of Y: • Number of increments in Y: 	
	6. Paragraph 4.2.7. The photometer is checked and set to a range of 100 \pm 5 by varying the HV adjust.	
	7. Paragraph 4.2.8. The f/number is set to the largest aperture as follows:	

REPORT ED82-AC-662

HOUSTON, TEXAS

DATE April 1975

TABLE 4-1 (CONT'D)

PART I - CHECKOUT

PARA REF	DESCRIPTION	INSPECTION
4.2.19 (Cont'd)	8. <u>Paragraph 4.2.9.</u> The X-Y scan is run using the parameters defined in Paragraph 4.2.6 of the data sheet. 9. <u>Paragraph 4.2.10.</u> Repeat Step 4.2.6 for the center vertical scan of film plane.	
4.2.20	All test equipment is turned off.	
4.2.21	Hasselblad camera is removed from calibration setup.	

PARA REF	ADDITIONAL STEPS REQUIRED BY TPS (WHERE APPLICABLE)	INSPECTION

TABLE 4-1 (CONT'D)

PART II - EQUIPMENT ID/DATA RECORDING

		TEST EQUIPMENT	S/N	P/N	TEST ARTICLE	S/N	P/N			
TEST TECH:		Photometer, Gamma Model 2020								
		Photomultiplier, Gamma Model 2020-1								
TEST ENGINEER:		Automatic Photometer Scan, NASA No. 86684								
		Hasselblad Mounting Fixture								
		Beck Hemisphere								
		IL700 Research Radiometer								
		Variac								
		IL700 Detector, PT171C								
		Power Source, NASA No. 36129								
		Shutter Release Box								
DATE:		Fiber Optic Probe with Cosine Adapter (cap attached)								
		<table border="1"> <thead> <tr> <th>NO.</th> <th>ADDITIONAL INFORMATION</th> </tr> </thead> <tbody> <tr> <td>1.</td> <td> IL700 CHECK OF HEMISPHERE <ul style="list-style-type: none"> • Variac set at _____ volts • IL700 <ul style="list-style-type: none"> ---Function _____ ---Suppression _____ ---Range _____ </td> </tr> </tbody> </table>						NO.	ADDITIONAL INFORMATION	1.
NO.	ADDITIONAL INFORMATION									
1.	IL700 CHECK OF HEMISPHERE <ul style="list-style-type: none"> • Variac set at _____ volts • IL700 <ul style="list-style-type: none"> ---Function _____ ---Suppression _____ ---Range _____ 									

REPORT ED82-AC-662

NASA-JSC
HOUSTON, TEXAS

PAGE 12 OF 14

DATE April 1975

TABLE 4-1 (CONT'D)
PART II - EQUIPMENT ID/DATA RECORDING

NO.	ADDITIONAL INFORMATION
1. Cont'd	-- Sensitivity factor <u>Variac</u> <u>11700 x 10⁻⁹</u>
NO.	REMARKS

TABLE 4-1 (CONT'D)

PART II - EQUIPMENT ID/DATA RECORDING

TEST TECH:	TEST EQUIPMENT	S/N	P/N	TEST ARTICLE	S/N	P/N
	TEST ENGINEER:	Photometer, Gamma Model 2020				
Photomultiplier, Gamma Model 2020-1						
Automatic Photometer Scan, NASA No. 86684						
Hasselblad Mounting Fixture						
Beck Hemisphere						
IL700 Research Radiometer						
Variac						
IL700 Detector, PT171C						
Power Source, NASA No. 36129						
Shutter Release Box						
DATE:	Fiber Optic Probe with Cosine Adapter (cap attached)					
	NO. <u> </u> ADDITIONAL INFORMATION 1. IL700 CHECK OF HEMISPHERE • Variac set at <u> </u> volts • IL700 ---Function <u> </u> ---Suppression <u> </u> ---Range <u> </u>					

TABLE 4-1 (CONT'D)

PART II - EQUIPMENT ID/DATA RECORDING

NO.	ADDITIONAL INFORMATION
1. Cont'd	-- Sensitivity factor <u>Variac</u> <u>1L700 x 10⁻⁹</u>
NO.	REMARKS